


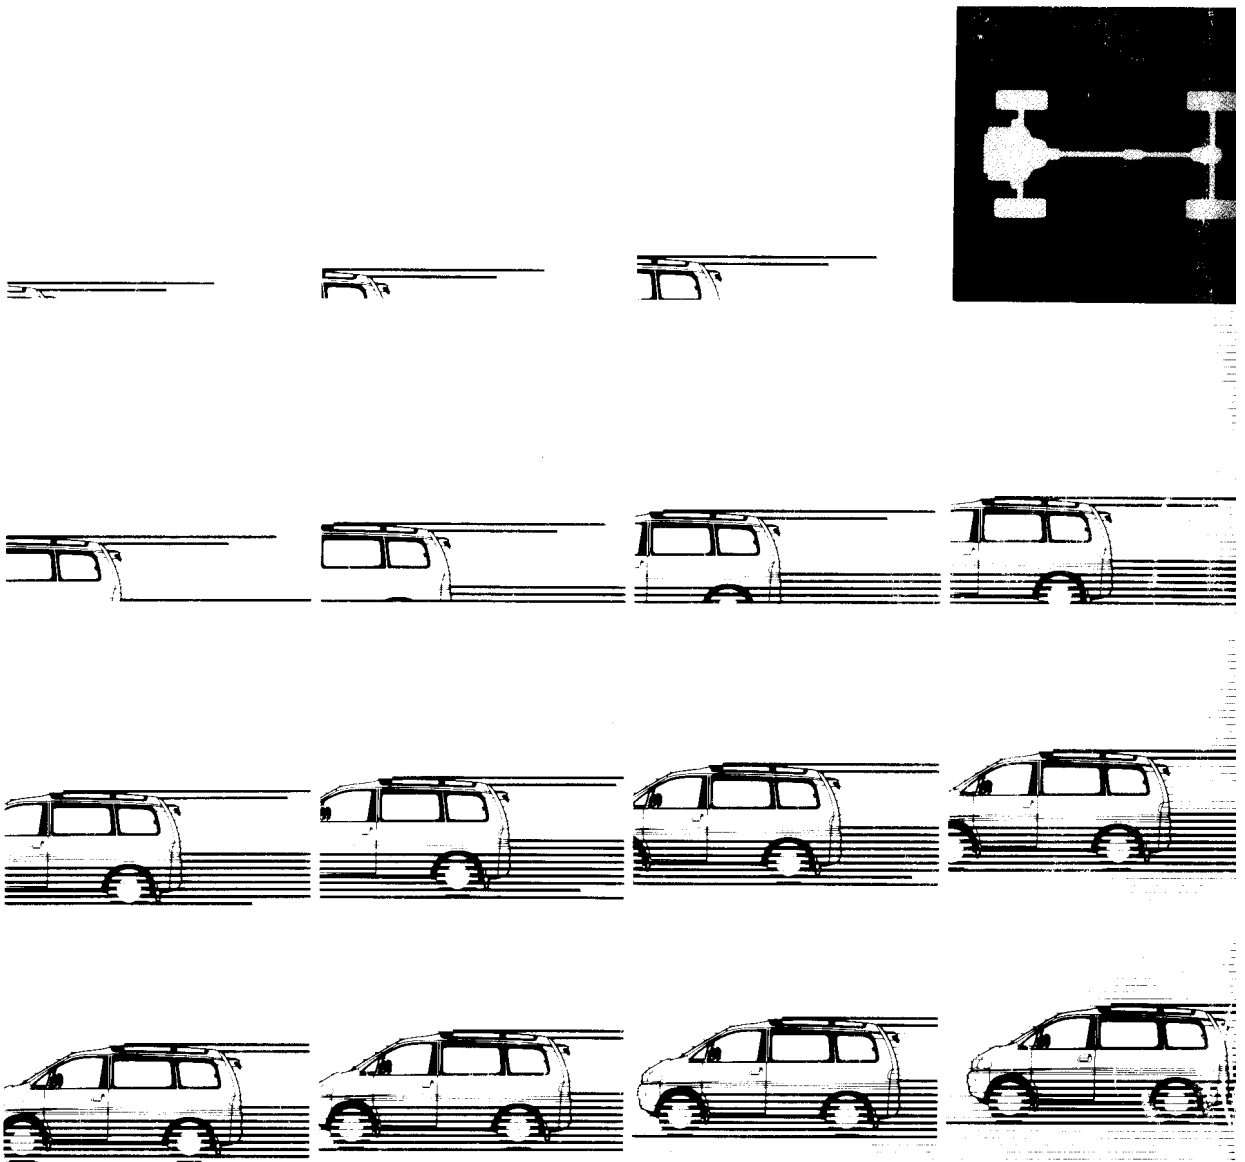

# Workshop Manual

chassis

## MITSUBISHI L400 '95



# MITSUBISHI L400

## WORKSHOP MANUAL

### FOREWORD

This Workshop Manual contains procedures for service mechanics, including removal, disassembly, inspection, adjustment, reassembly and installation. Use the following manuals in combination with this manual as required.

TECHNICAL INFORMATION MANUAL  
PYWE9410

WORKSHOP MANUAL  
ENGINE GROUP PWEE □□□□  
(Looseleaf edition)  
ELECTRICAL WIRING PHWE9407  
BODY REPAIR MANUAL PBWE9404  
PARTS CATALOGUE B603A805A□

All information, illustrations and product descriptions contained in this manual are current as at the time of publication. We, however, reserve the right to make changes at any time without prior notice or obligation.



General .....	00
Engine .....	11
Lubrication .....	12
Fuel .....	13
Cooling .....	14
Intake and Exhaust .....	15
Engine Electrical .....	16
Emission Control .....	17
Clutch .....	21
Manual Transmission .....	22
Automatic Transmission .....	23
Propeller Shaft .....	25
Front Axle .....	26
Rear Axle .....	27
Wheel and Tyre .....	31
Power Plant Mount .....	32
Front Suspension .....	33
Rear Suspension .....	34
Service Brakes .....	35
Parking Brakes .....	36
Steering .....	37
Body .....	42
Exterior .....	51
Interior and Supplemental Restraint System (SRS) .....	52
Chassis Electrical .....	54
Heater, Air Conditioner and Ventilation .....	55

**WARNING!**

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).**
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or in drying after painting, remove the SRS components (air bag module, SRS diagnosis unit, front impact sensors) beforehand.**
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.**
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS), before beginning any service or maintenance of any component of the SRS or any SRS-related component.**

**NOTE**

Section titles with asterisks (\*) in the table of contents in each group indicate operations requiring warnings.